


ASSEMBLY INSTRUCTION

ITEM#:192440 192441

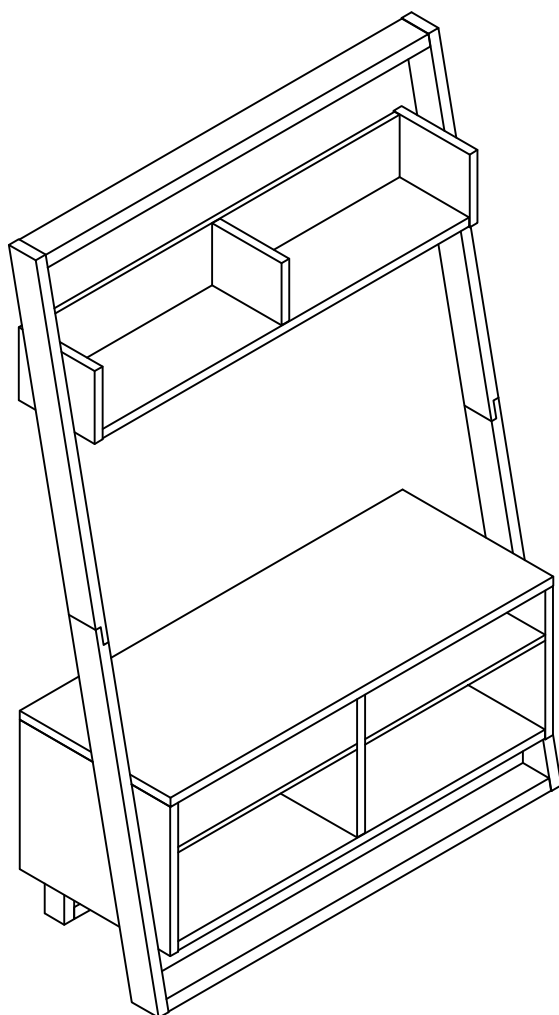

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 192440 192441

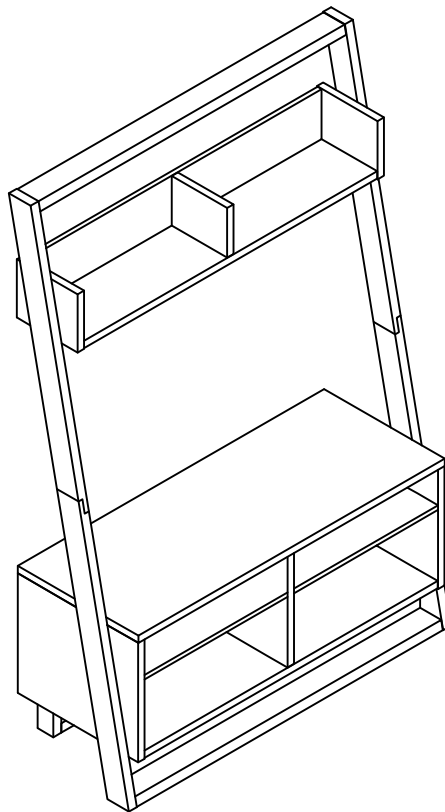

PARTS IDENTIFICATION




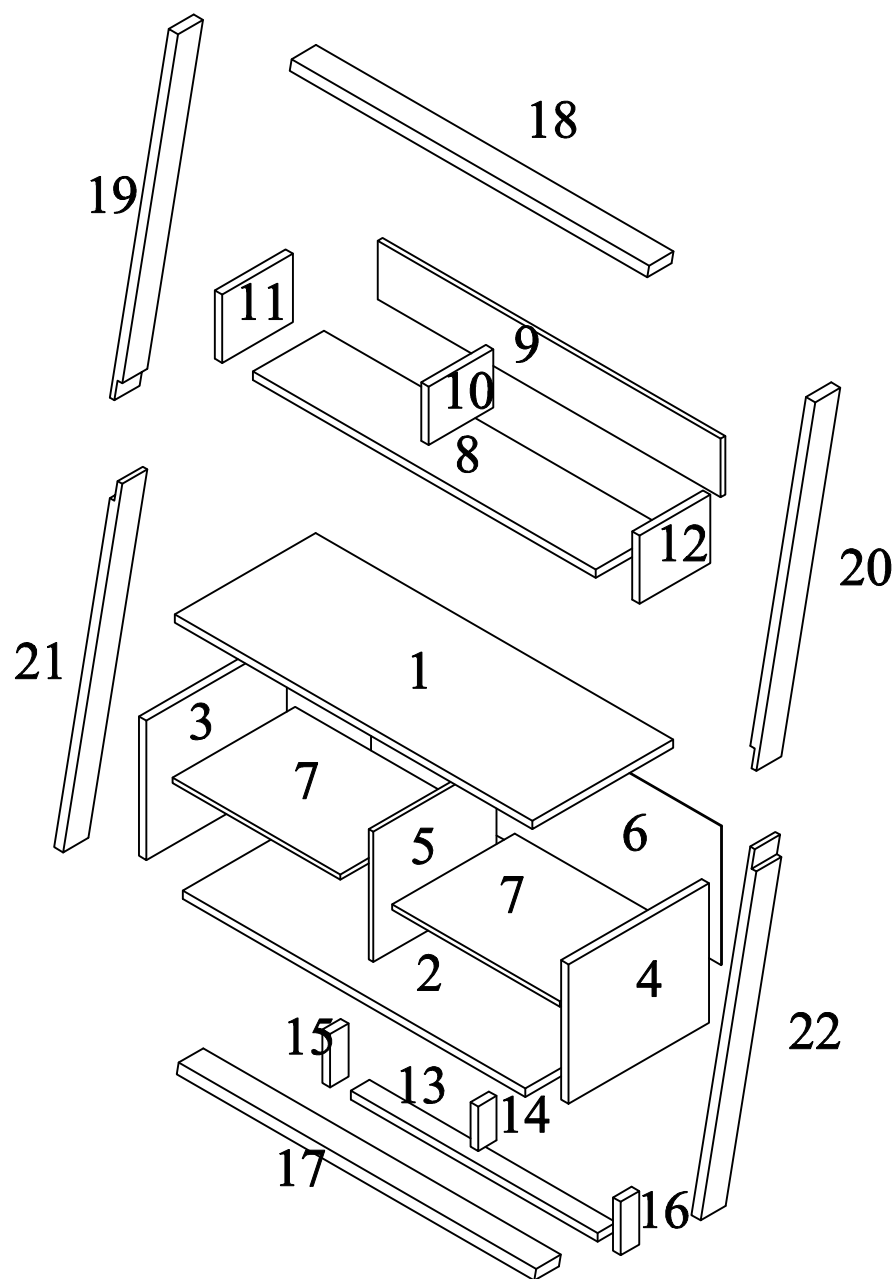


















ITEM#:192440 192441



(1) 1pc	(6) 1pc	(11) 1pc	(16) 1pc	(21) 1pc
(2) 1pc	(7) 2pcs	(12) 1pc	(17) 1pc	(22) 1pc
(3) 1pc	(8) 1pc	(13) 1pc	(18) 1pc	
(4) 1pc	(9) 1pc	(14) 1pc	(19) 1pc	
(5) 1pc	(10) 1pc	(15) 1pc	(20) 1pc	

HARDWARE IDENTIFICATION


ITEM#: 192440 192441





A		L=29mm	21PCS
B		Ø15mm	21PCS
C		Ø8×25mm	22PCS
D		Ø4×40mm	8PCS
E		170×24×3	2PCS
F		M6×65mm	4PCS
G		Ø10×15mm	4PCS
H		Ø20mm	50PCS
I		M6×12mm	8PCS
J		M6×45mm	10PCS
K		M6×20mm	6PCS
L		M6	16PCS
M		Z1016	20PCS
N		Ø5	8PCS
O		M4	1PC
T		Ø16mm	5PCS
U		197×5×1	1PC
V		Ø4×25	1PC
W		Ø5×40	1PC
X		Ø8×40	1PC
Y		12×12×1	2PCS
Z		10g	1PC


ASSEMBLY INSTRUCTION

ITEM#:192440 192441

HOW TO

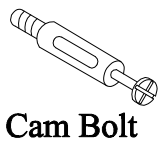


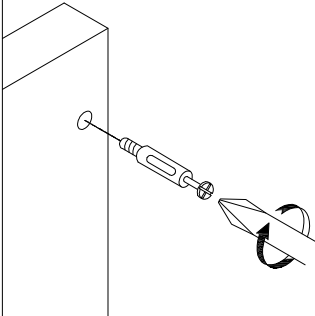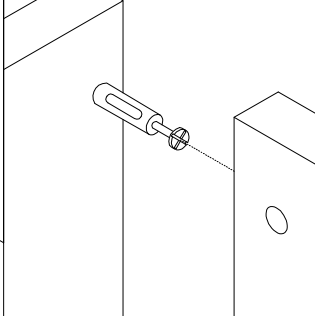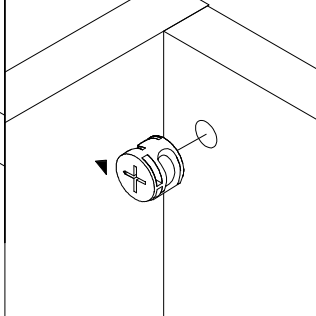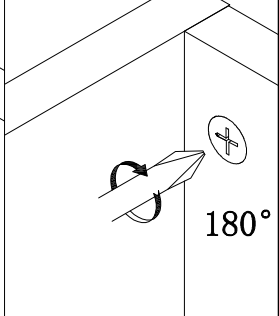1	2	3	4
			
1.Screw Cam Bolt into panel.	2.Insert Cam Bolt into bolt hole of joining panel.	3.Insert Cam Lock. arrow facing bolt.	4.Gently turn Cam Lock clockwise to lock position.

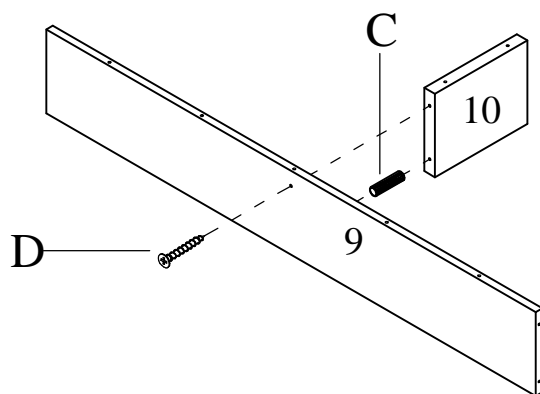


STEP1

STEP2

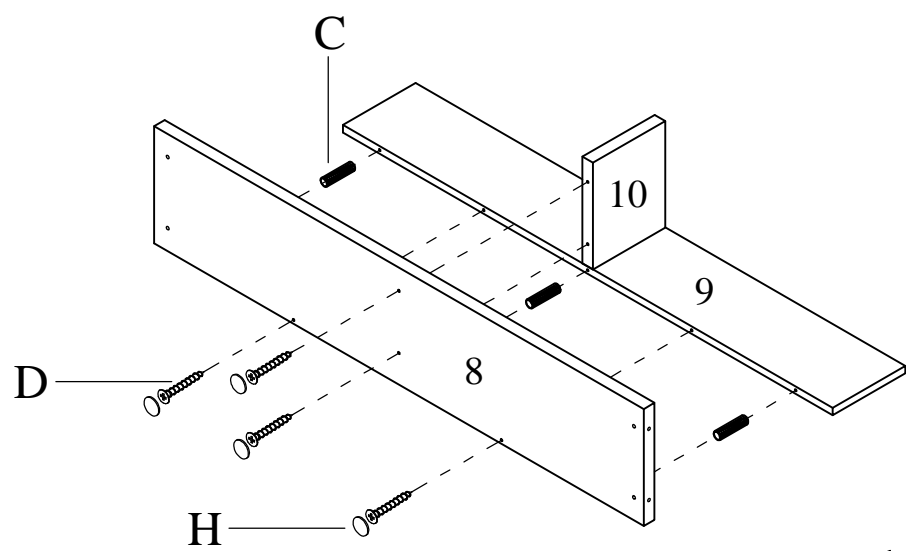


ASSEMBLY INSTRUCTION

ITEM#:192440 192441

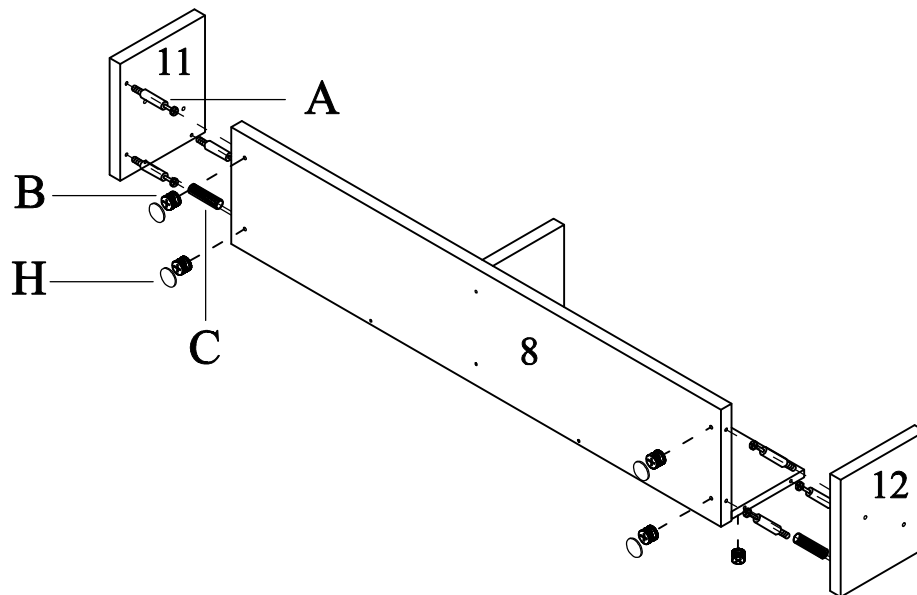


STEP3

STEP4

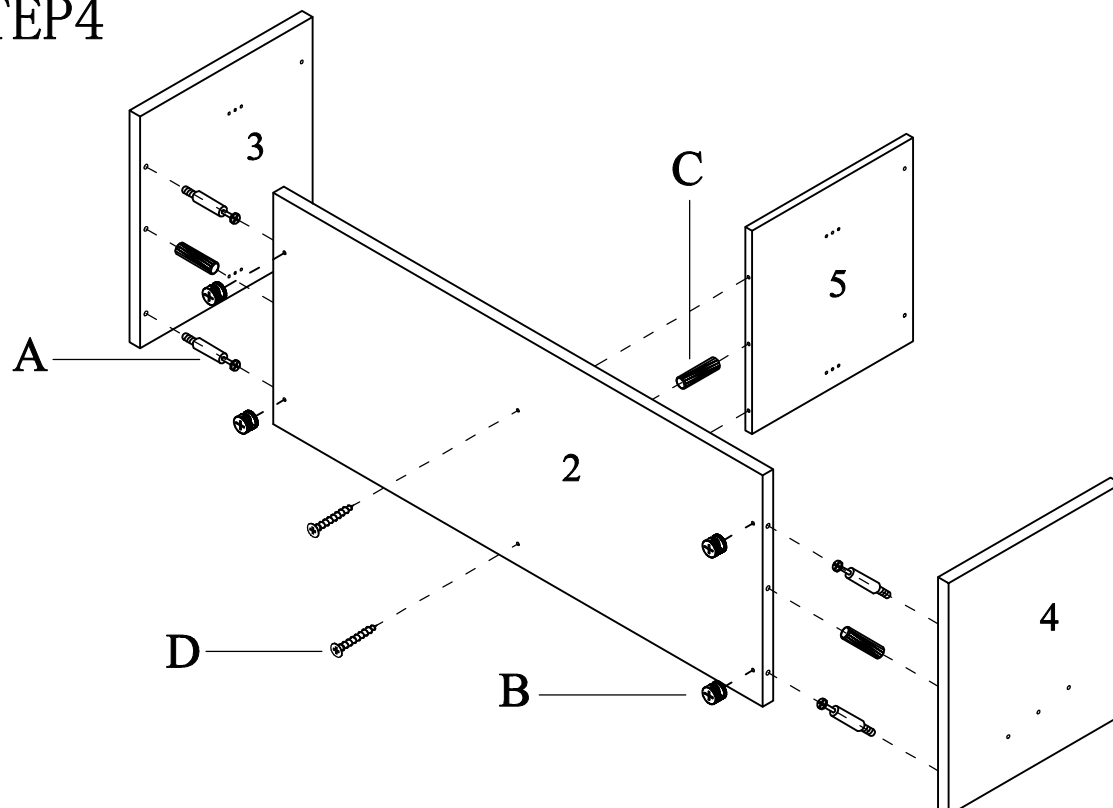


ASSEMBLY INSTRUCTION

ITEM#:192440 192441

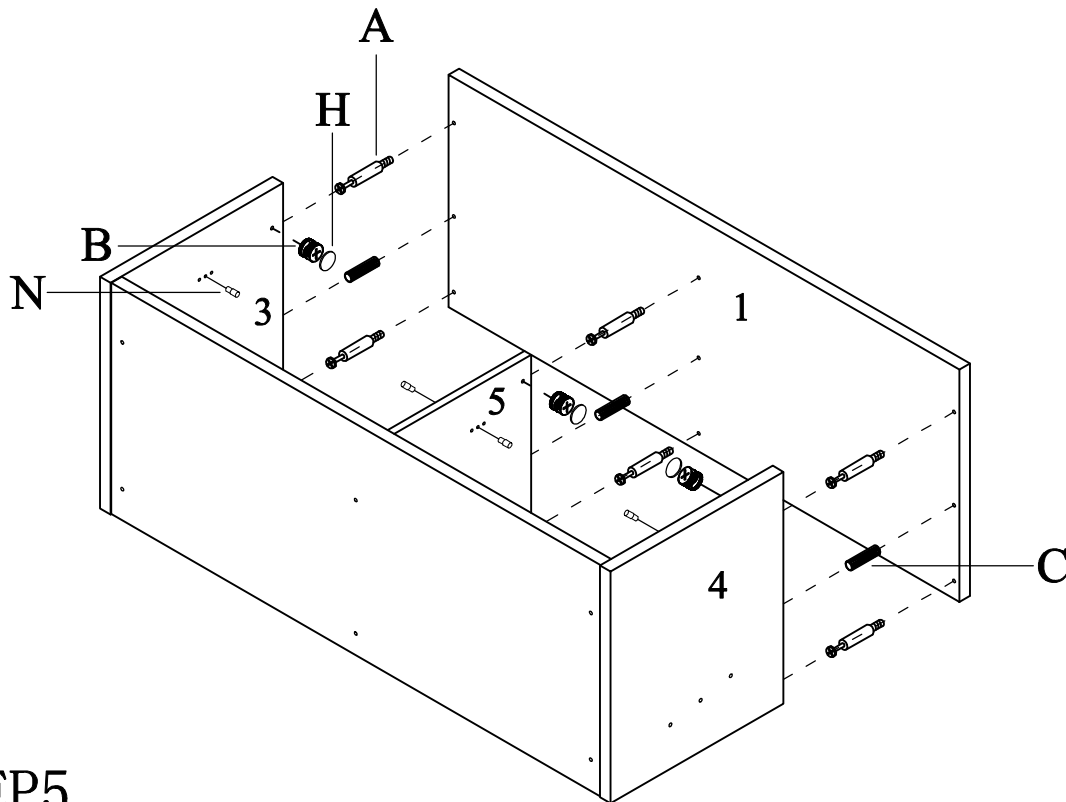


STEP5

STEP6

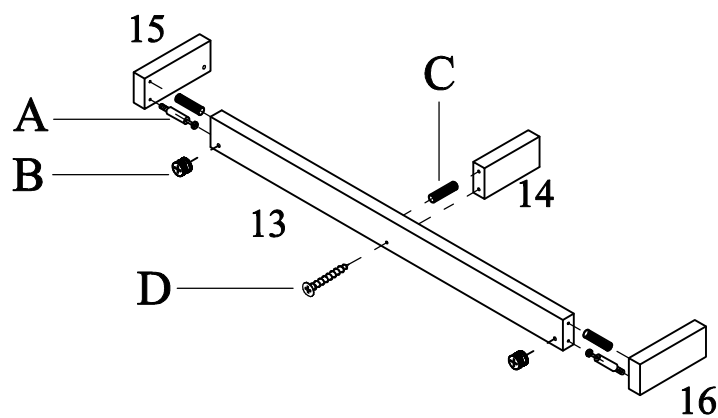


ASSEMBLY INSTRUCTION

ITEM#:192440 192441

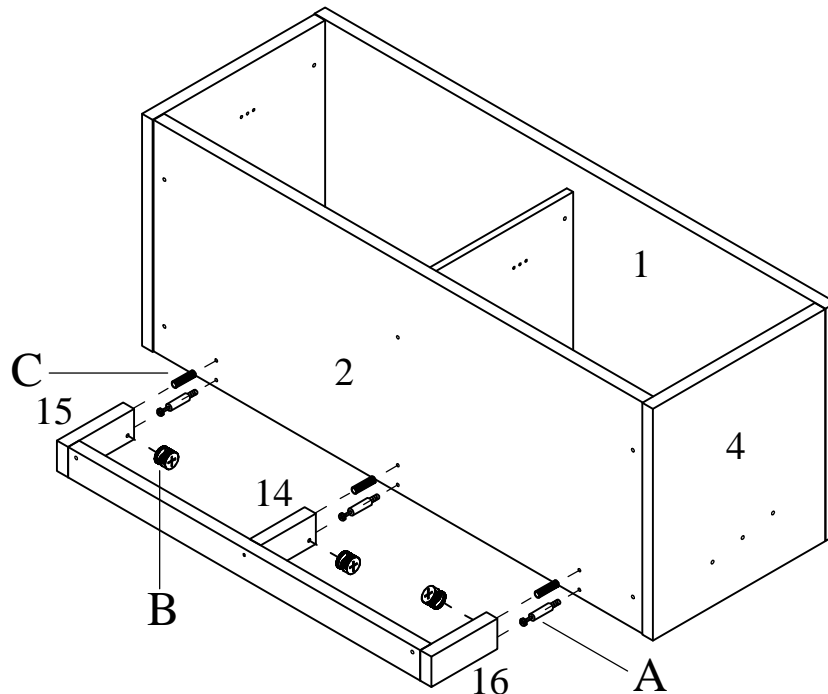


STEP7

STEP8

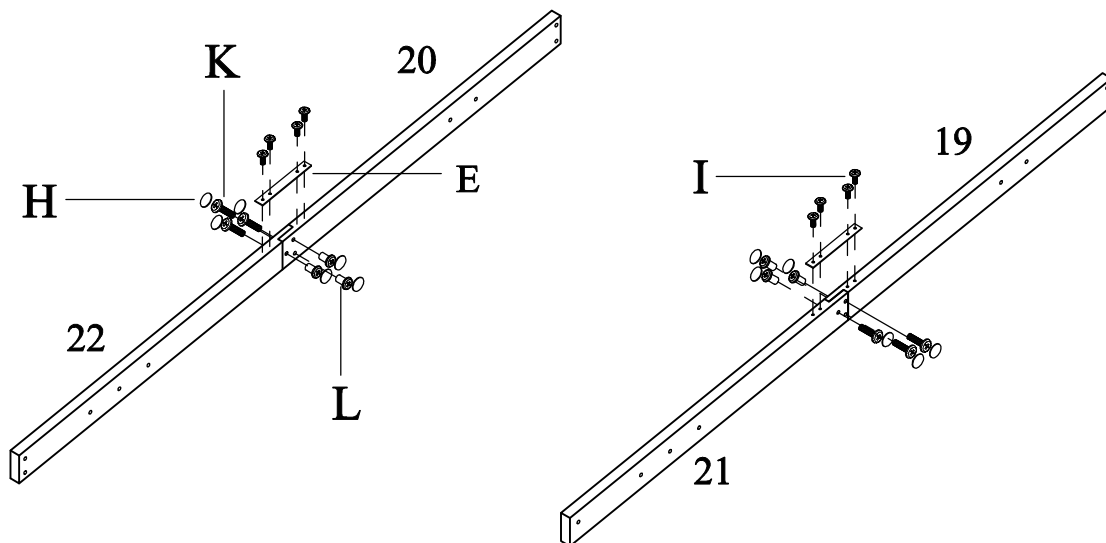


ITEM#:192440 192441

STEP10




ASSEMBLY INSTRUCTION

ITEM#:192440 192441

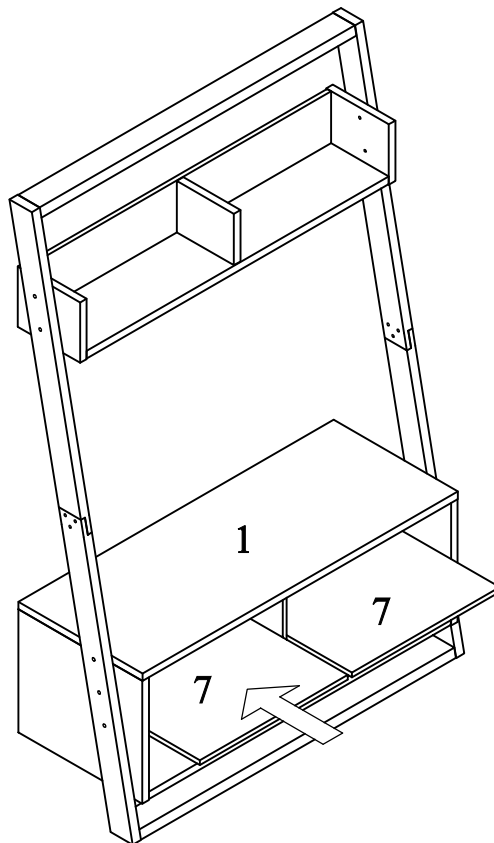


STEP11

STEP12

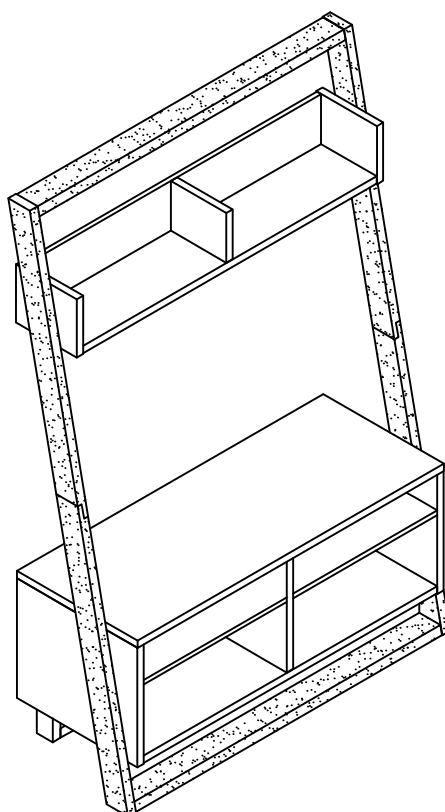


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

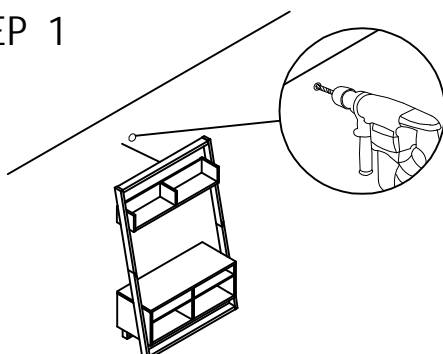


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

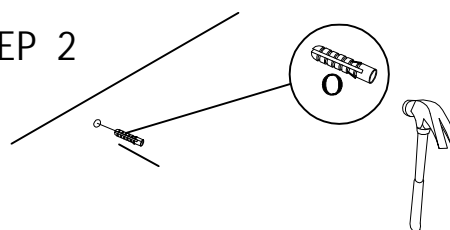


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

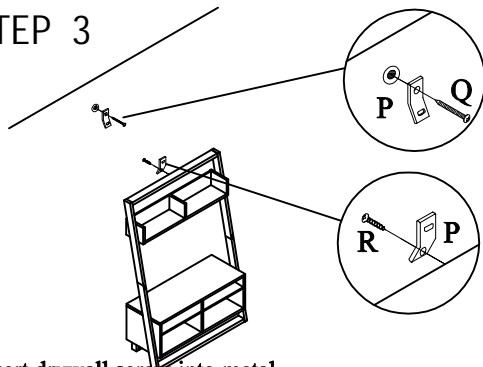

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

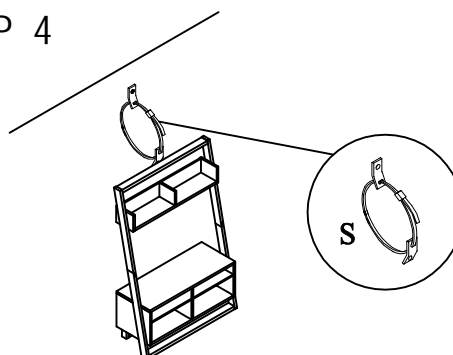

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
2. Pull lightly til strap stops. Assembly is complete.